


PRINT AT 100%
ACTUAL SIZE



No "fit to page", no scaling: this bar must measure 4.00 in (101.6 mm) on paper. Cut each template out on its outer box, wrap it with the blue edges meeting on the scribe line (theta 0, the outside of the bend), butt the black edge to the sawn end, trace the red line, cut, dress. Landing strips: trace the blue outlines; the number is the assembly step.

T3-B - END B

3
COPE 90 deg onto 1.50 OD
depth 1.682 in, tip to throat

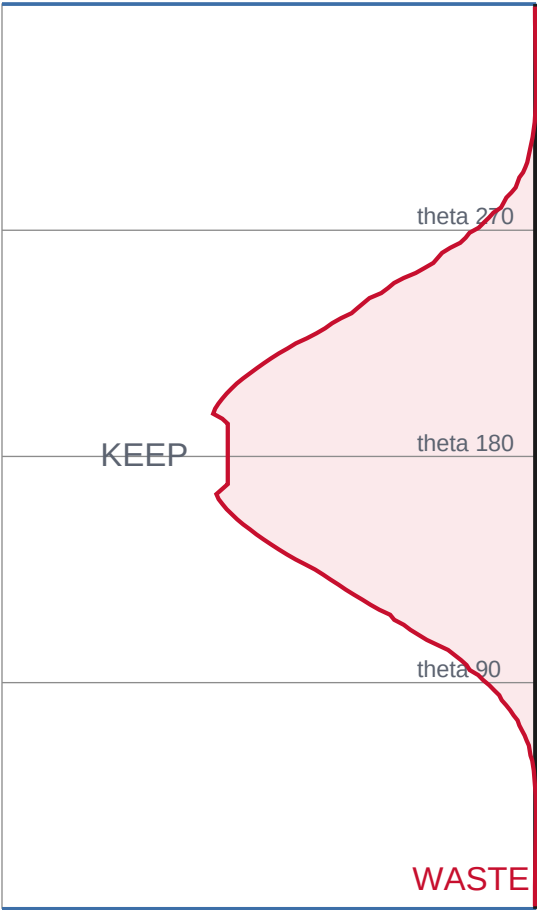

sawn END B >

blue edges = scribe line

T4-B - END B

4
COPE 90 deg onto 1.50 OD
depth 1.947 in, tip to throat




sawn END B >

blue edges = scribe line

S-1A - marks from END A

1
step 3: 3 end B - mark: 4 offcut end B

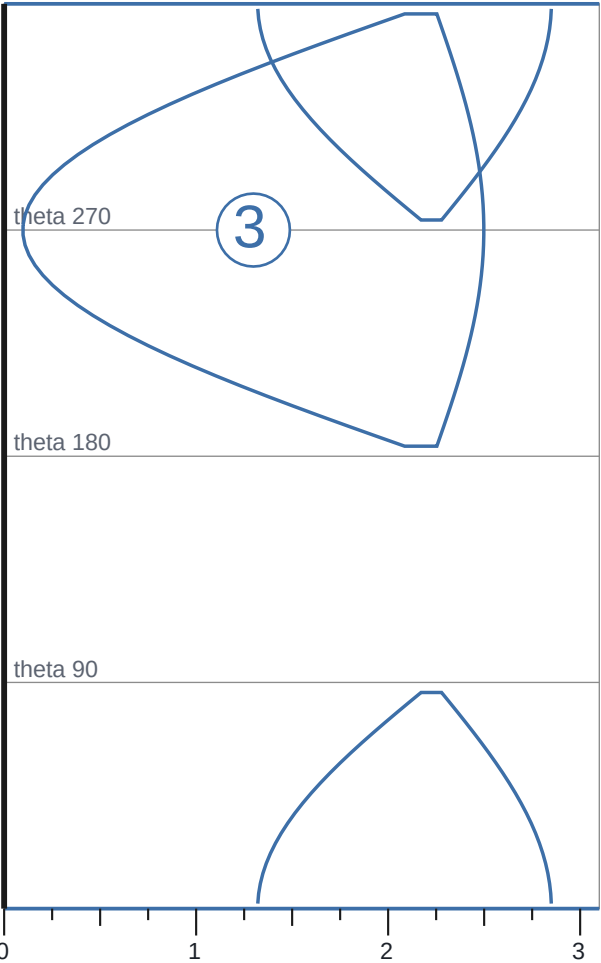

< sawn END A - ruler = inches from END


PRINT AT 100%
ACTUAL SIZE



No "fit to page", no scaling: this bar must measure 4.00 in (101.6 mm) on paper. Cut each template out on its outer box, wrap it with the blue edges meeting on the scribe line (theta 0, the outside of the bend), butt the black edge to the sawn end, trace the red line, cut, dress. Landing strips: trace the blue outlines; the number is the assembly step.

T2-B - END B

2
COPE 90 deg onto 1.50 OD
depth 0.673 in, tip to throat

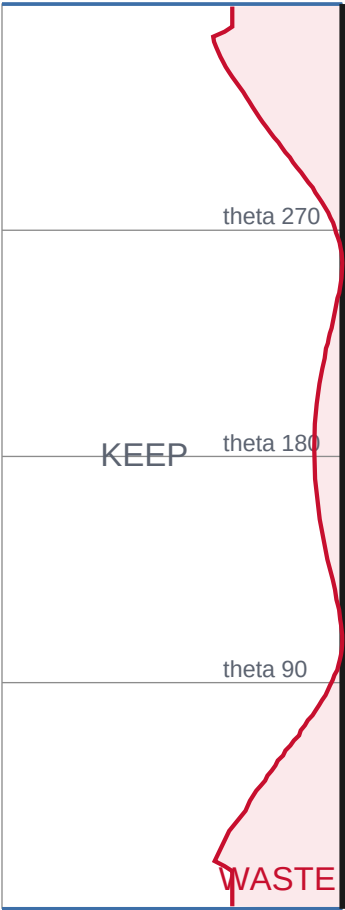

sawn END B >
blue edges = scribe line
ruler = inches from END B - sawn END B >

S-1B - marks from END B

1
mark: 2 offcut end B

